


POLYWRATH


MODEL KIT - ASSEMBLY GUIDE

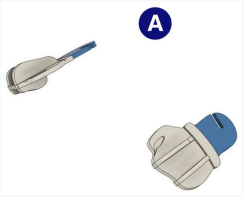


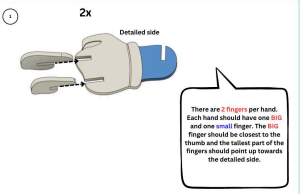

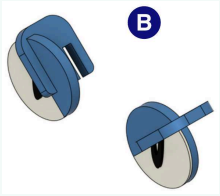





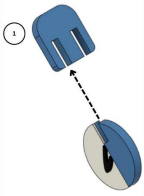


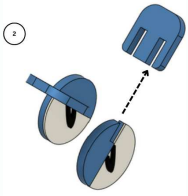



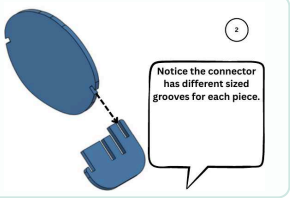


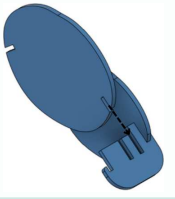

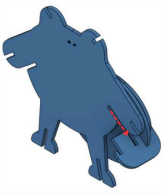







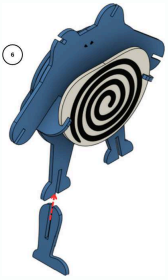






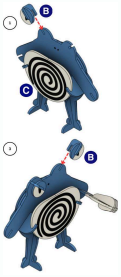

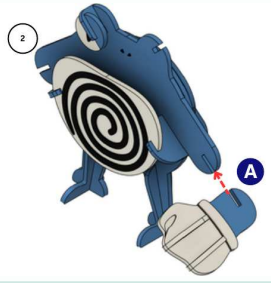

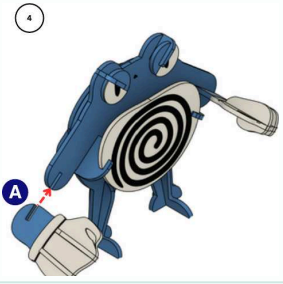

LOOK AFTER YOUR LAYERS

KEEP OUT OF DIRECT SUN AND HEAT. DUST WITH A SOFT, DRY BRUSH.

MORE LAYERS: SCAN THE CODE